## Class B or C Checklist Straight Truck or Other Straight Vehicle

Note – BBC = bent, broken or cracked

In-Vehicle/Engine Start

	air brake check	#1-Bui #2 - #2 - #2 - #2- #3- #4-	put truck into Turn key bac (Hydraulic) p The brake pe (AIR) Hold b Fan brake pe Fan brake pe	ernor cut off to Aprox 125psi (If air brake equiptped) to low gear or nuetral or park, turn off engine. Ck on to Acc. Press in Truck brake valve (yellow) If air-brake equipped pump the brake pedal three (3) times, and then hold it down for 5 seconds edal should not move (depress) after initial application (Brake check is done) brake pedal for 1 minute, can't lose more than 3psi in 1 minute bedal until low air warning comes on before 55 psi. edal until brake valves on dash pop out around 25 psi TIC FAILURE IF NOT PERFORMED CORRECTLY***
	Parking & trailer b	rake check	Tug a	against trailer & tractor brakes separately
	service brake che	ck	Drive	e forward to 5mph, apply brake, should not veer to left or right.
	lighting indicators		Check dash	indicators – left & right turn signals, hazards, high beam, ABS DEF
	emergency equipment Fire extin		Fire extingui	isher – properly charged & rated / 3 reflective triangles / spare fuses
	Windshield & traffi	c monitorii	ng devices	Windshield not cracked, clean & no illegal stickers. Traffic monitoring devices – not BBC, no illegal stickers, adjusted to me
	Wipers & washers		s – BBC, rubb tion both are	per not missing or torn, must activate wipers and washers functioning.
	Heater & defroster	must o	check both de	efrost and either floor or vent heater
	horn(s) City & h	nighway		
Lic	ghts Operation Ch	eck		
	all external lights	At this exterio	or lights. You	rill ask the examiner to exit the vehicle and please inspect the will ask them to inspect the front lights, then the side lights, the passenger side lights on the vehicle
	Front – L-R-4-C-H		<b>J</b>	
	Side – L-4-C-R	N 0		
	Rear – L-R-4-TL-E	BL-C		
Fro	ont of Vehicle/Eng	ine Area		
			ses on front	of vehicle. Not damaged, missing and proper color
	fluid levels En	gine Oil /	Coolant / Pow	ver Steering / Hydraulic Fluid. Describe how to check each item.
	Fluid & air leaks	Check	under vehicle	e for fluid leaks, listen for air leaks
	steering systems			
	Steering box Steering hoses Steering linkag			ounted & secured not BBC & not leaking , worn or leaking
				ounted & secured not BBC
		ag Link		ounted & secured not BBC ounted & secured not BBC
	Ca	stle nuts tter Pins	Properly mo	ounted & secured not BBC & present ounted & secured not BBC & present ounted & secured not BBC & present
	CO	COLLIII2	i iobeily illo	antea a secured not bbo a present

1	h gauge, no less than 4/32 of an inch.
rims Not BBC (bent, broken o	or cracked), no welds
lug nuts Not BBC, missing or los	se. No rust trails or shiny threads that may indicate a loose nut
	gs & mounts properly mounted & secured not BBC. Shocks properly ted and secured, not BBC and not leaking.
brake lines or hoses & leaks	Not cracked, worn or frayed & not leaking
brake contamination	Check for grease & oil that could affect braking
Side of Vehicle Lenses & reflectors	Check all lenses & reflectors, not broken, missing, clean proper color.
traffic monitoring devices	Properly mounted & secured, not BBC. Proper spacing between landing
battery	No signs of excessive corrosion, cables not cracked or worn, battery box cover is secured.
fuel tank(s)/DEF tank	Properly mounted & secured, not BBC and not leaking. Check that caps are secured and seals are in place & not leaking.
frame(s)	Properly mounted & secured, not BBC.
Rear of Trailer	
Lenses & reflectors	Check all lenses & reflectors, not broken, missing, clean proper color.

Steering Axle

Don't forget to check the RIGHT lenses on the passenger side if the vehicle